

Quick-Connect Guide

DTX-3000

 
Home Theater in a Box

home theater

YAMAHA®


Yamaha created this package to greatly enhance your audio and home theater enjoyment. This Quick-Connect Guide will help you get started. Follow the steps to connect the speakers first. Then connect your Receiver, DVD Player and other components. Refer to your Owner's Manuals as well as those that came with your other components for complete instructions and precautions. *Be sure that all components are not plugged in while making connections.* You will need the following which are not included in the package: Phillips screwdriver, wire cutter/stripper. Brackets, toggle bolts, molly anchor screws or sheet metal screws are optional.

1 Your System

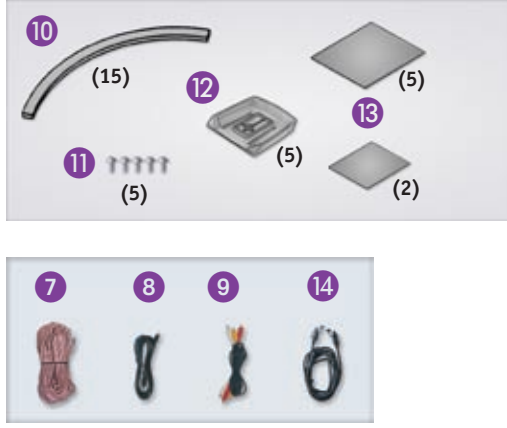


Inspect Contents After unpacking, inspect the contents to confirm you have the above items: 1 two front speakers, 2 three surround speakers, 3 one center speaker, 4 powered subwoofer, 5 HTR-5740 A/V Receiver with remote control, 6 DV-C6660 DVD Player with remote control, 7 speaker wire, 8 RCA cable, 9 audio/video RCA cable, 14 optical cable, 10 non-skid pads, 11 screws, 12 support bases, and 13 fasteners. Also included, but not shown, are AM and FM antennas and three related Owner's Manuals.

 2 Room Layout

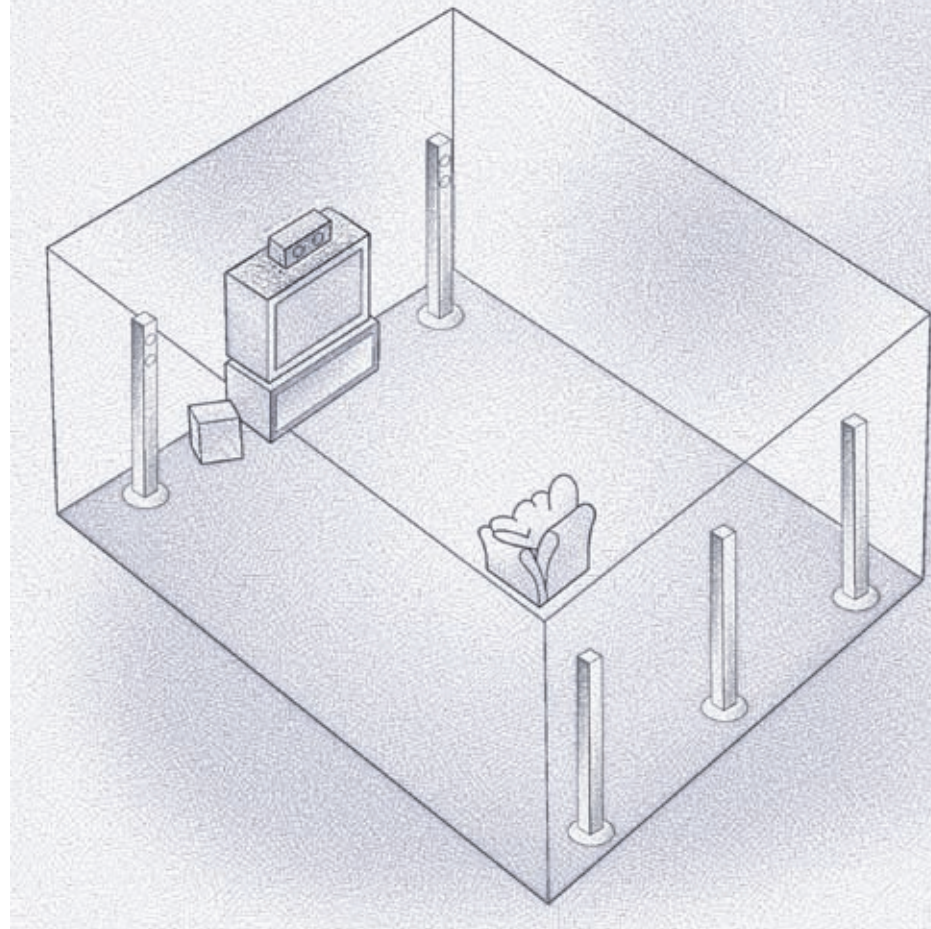

Speaker Placement After connection of the speakers place them so they appear in the approximate positions as shown in the diagram above.

 3

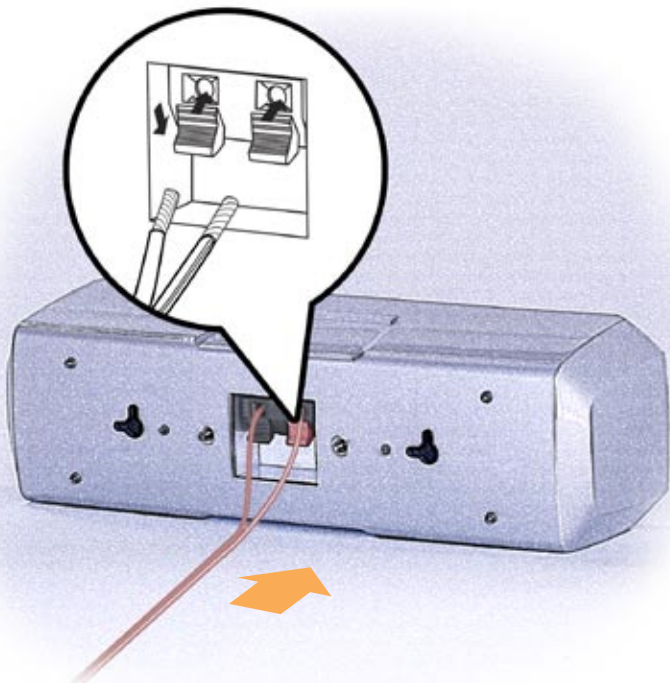

Connect Center Speaker Wire

Cut speaker wire 7 to appropriate lengths for all speaker connections. Connect speaker wire for center speaker 3. The positive (+) side of the wire with the white stripe attaches to the red terminal. The negative (-) side attaches to the black terminal. (See your HTR-5740 Owner's Manual for more information on speaker wire connections.)

 
4



Front and Surround Speaker Assembly

Attach Bottom Pads Apply pads 10 to bottom of speaker stand as shown.

5

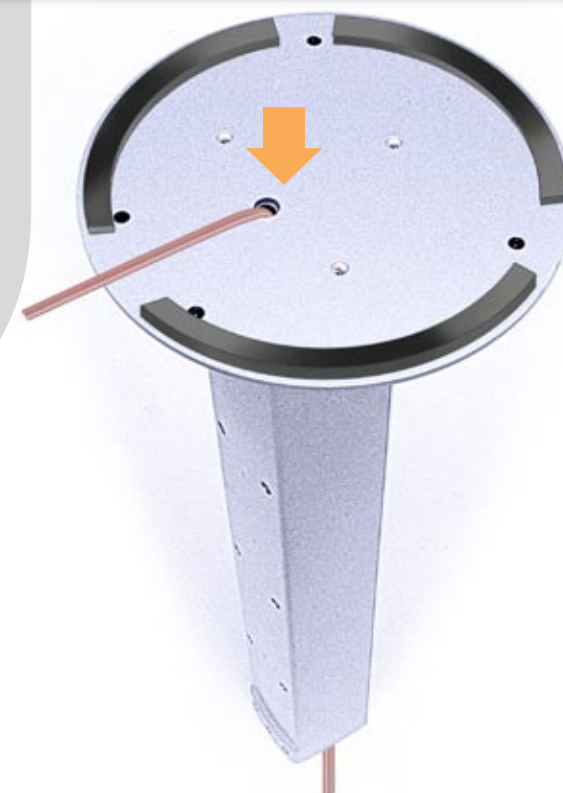


Thread Speaker Wire Pass the speaker wire through the underside of speaker stand.

6



Turn Speaker Stand Right-Side-Up Remove screw that holds adapter in, carefully set aside, then remove adapter from speaker stand.
Thread Speaker Wire Make sure speaker wire continues to pass through the adapter.

 7

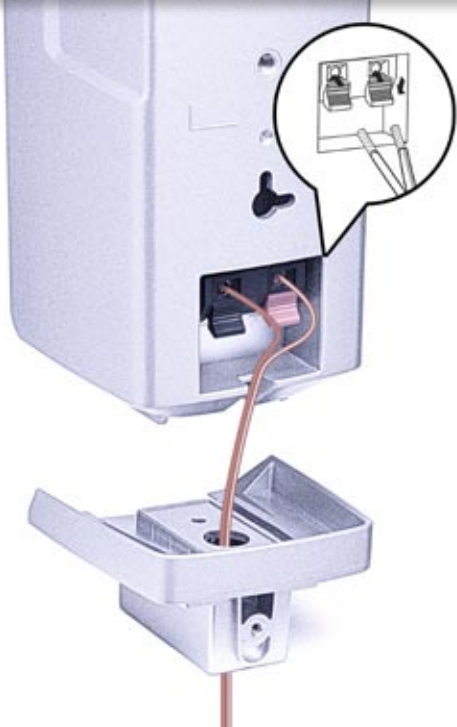

Connect Front and Surround Speaker Wire Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

8



 
Attach Adapter to the Speaker using the supplied screw 11.

9



Push Together the speaker and adapter into the speaker stand. Attach adapter to the speaker stand using the screw that was set aside in Step 6.


10

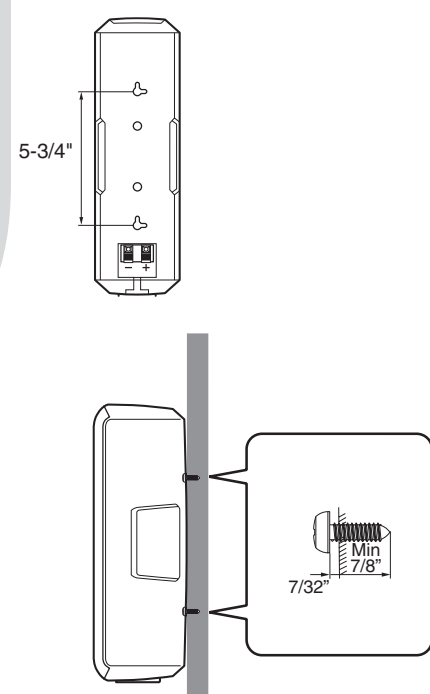

Mounting Speakers to Wall (Optional) Fasten mounting screws into a firm wall or wall support. Leave 7/32 in. between head and wall. Hang the keyholes on the speaker backs on the protruding screws.

WARNING Please contact a reliable source about the best type of hardware for your particular wall's construction. Secure installation is purchaser's responsibility. See your owner's manual for additional precautions.

 11

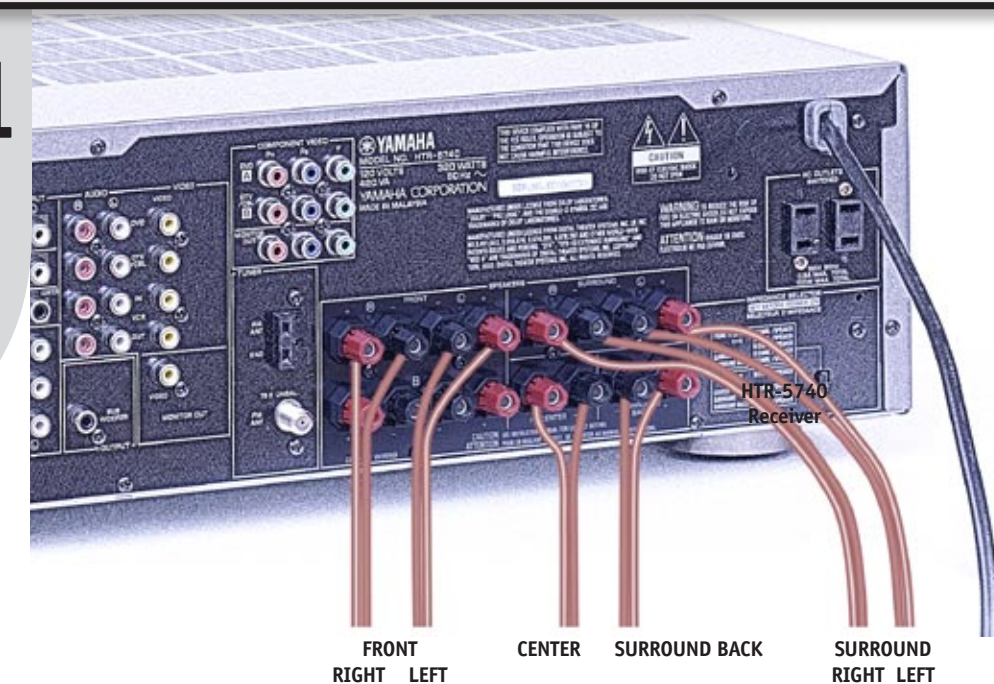

Receiver Connections

Connect Speakers Positive (+) side of the wire with white stripe attaches to (+) terminal. Negative (-) side attaches to (-) terminal.

CAUTION Receiver must not be plugged in while connecting speakers.

12

 


Subwoofer Connection

Connect RCA Cable Connect RCA cable 8 to subwoofer 4. Set subwoofer VOLUME control to half-way mark and POWER to OFF. Connect RCA cable to receiver from subwoofer.


WARNING Components must not be plugged in while connecting them.

13

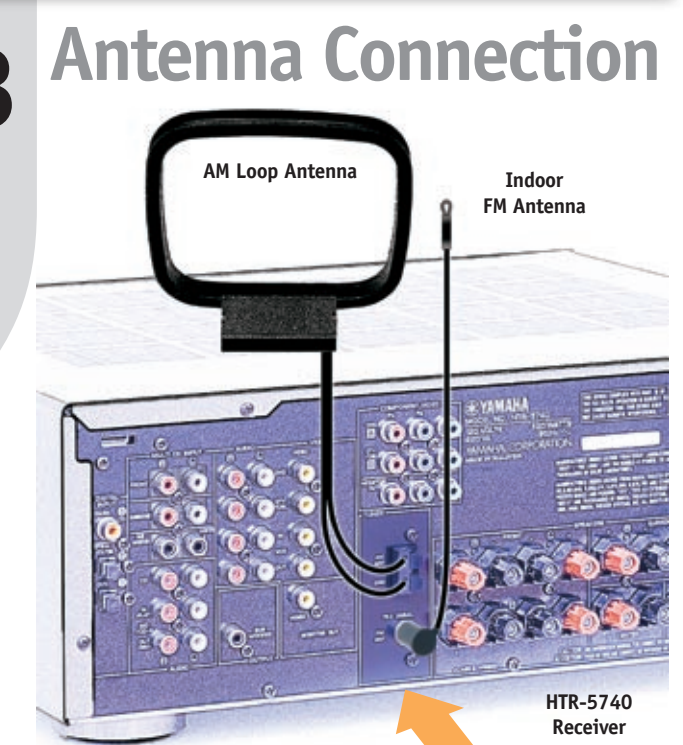

Connect Antennas to Receiver Locate AM loop antenna and indoor FM antenna. Keeping receiver unplugged, connect as shown. For more information about obtaining clear reception and grounding, see your Owner's Manual.

 
14

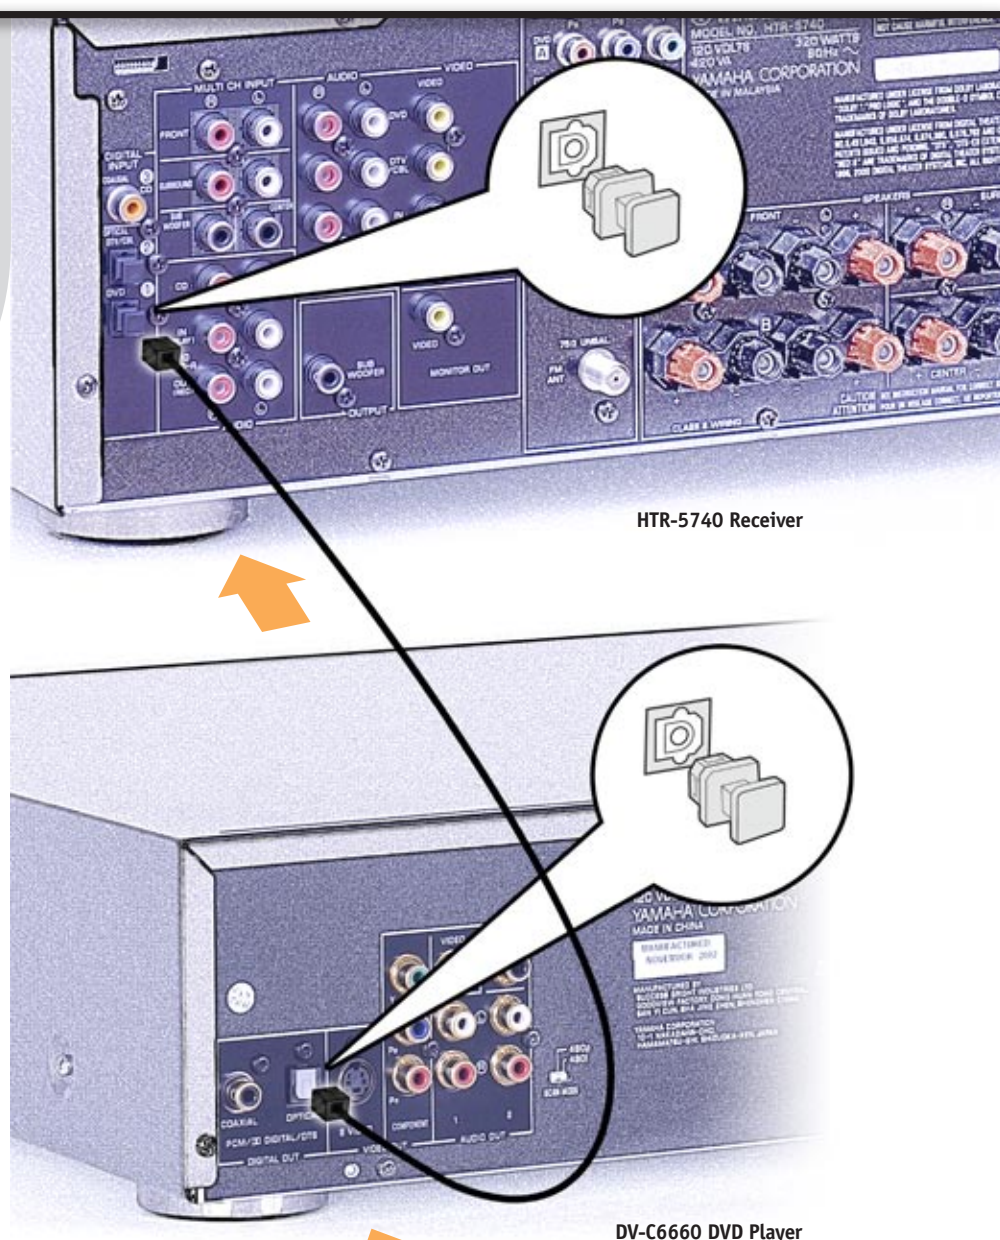

DVD Player Connection

DVD Player Optical Connection (optional) Remove dust cap on optical input as shown on insets. Connect optical cable 14 to receiver. Connect optical cable to DVD player from receiver.

 15

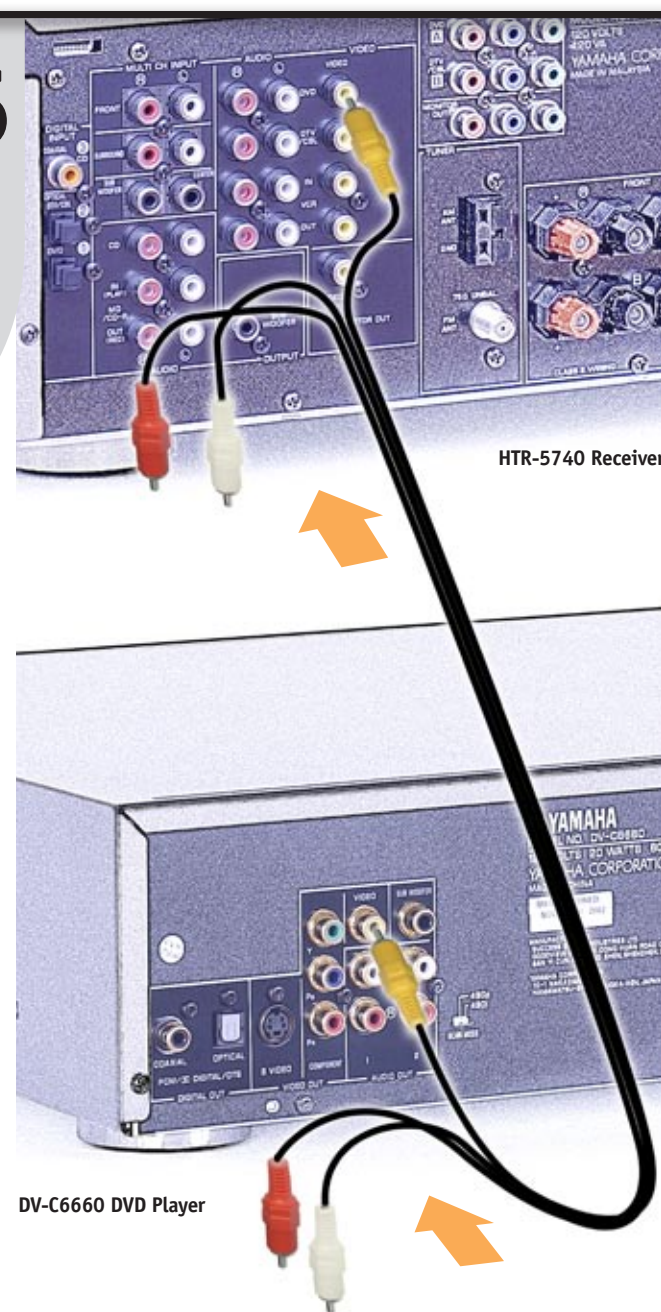


Connect DVD Player

Top: Connect RCA audio/video cables 9 to receiver: Yellow to "DVD," as shown, and leave White and Red unplugged.

Bottom: Connect video cable to DVD player from receiver: Yellow to "Video," as shown, and leave White and Red unplugged.

WARNING Components must not be plugged in while connecting them. Wait until all connections are made before plugging in your components.

 16

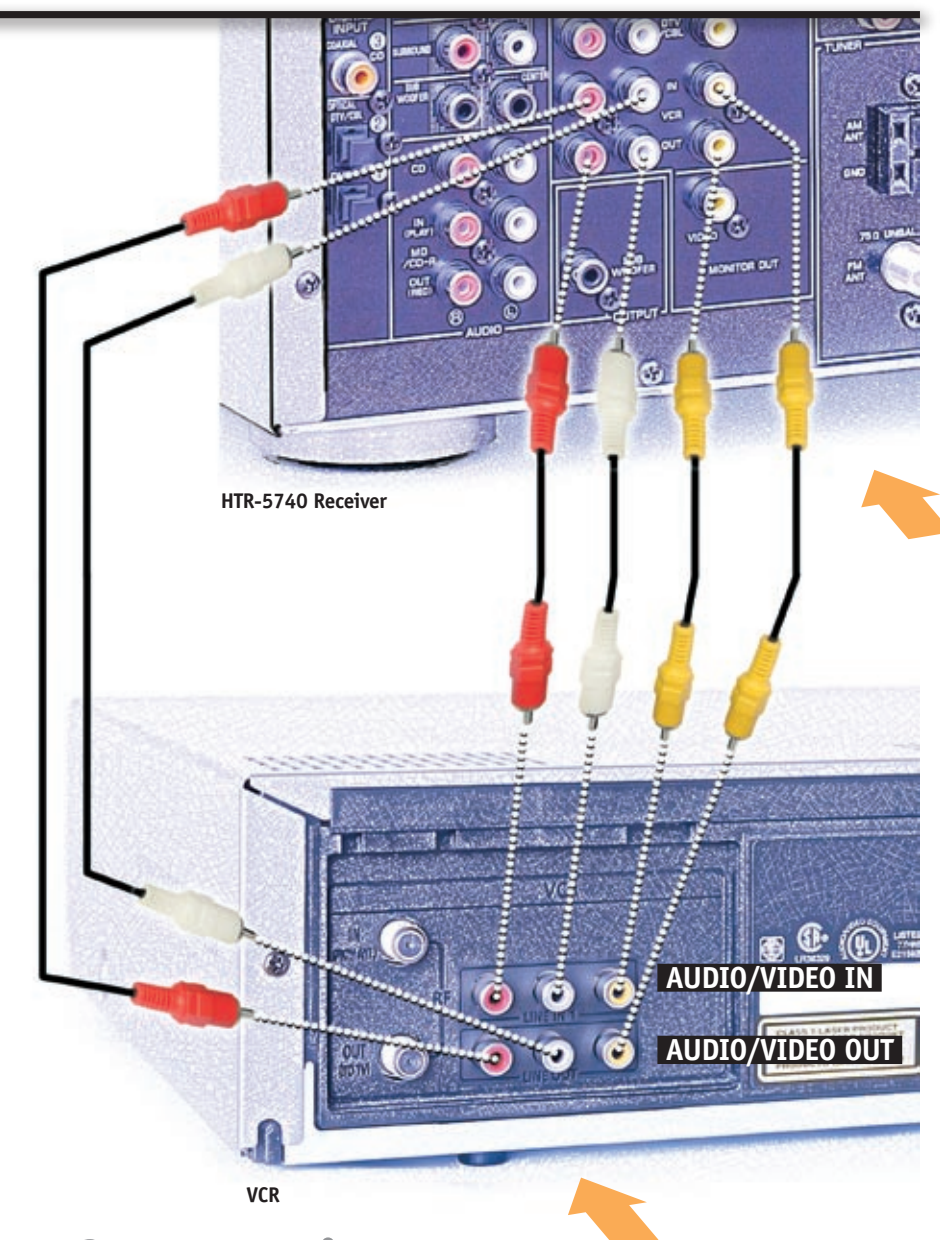


VCR Connection

Connect VCR (optional) Connect audio/video cables (not included) as shown.

NOTE VCR shown is for illustration purposes only. When using a hi-fi stereo VCR, set the Tuner/Line switch on the VCR to "Line" position to record from another source connected to the HTR-5740 receiver.

 
17

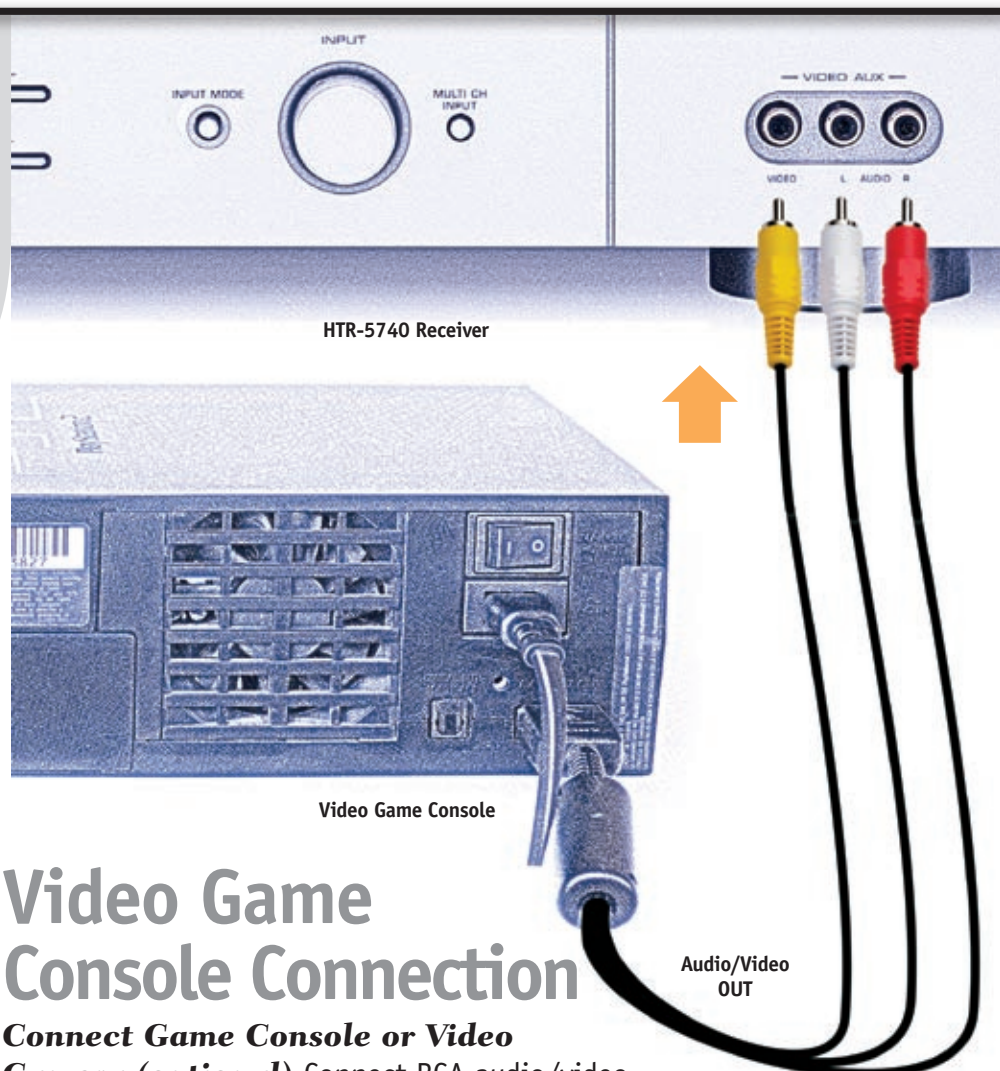

Video Game Console Connection

Connect Game Console or Video Camera (optional) Connect RCA audio/video cables (not included) as shown.

 
18

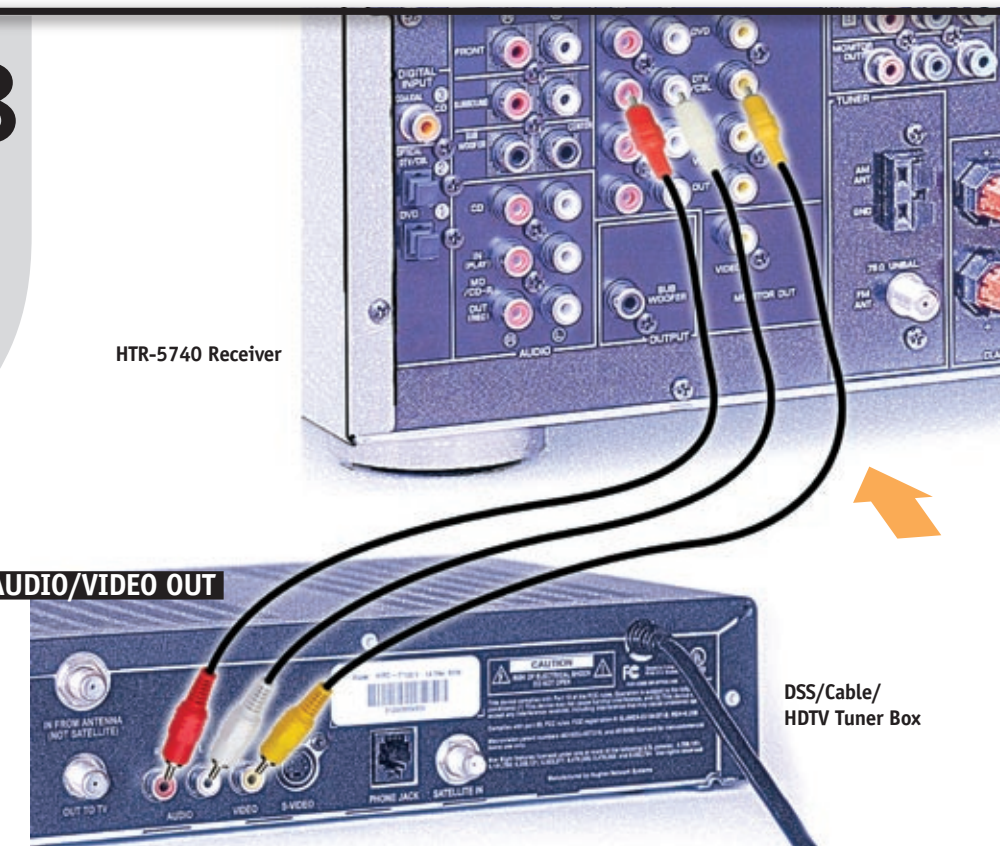

DSS/Cable/HDTV Tuner Connection

Connect DSS/Cable/HDTV Tuner Box (optional) Connect RCA audio/video cables (not included) and optional optical cable (not pictured) to "DTV/CBL" terminals on receiver to A/V OUT connections on Box as shown.

 
19

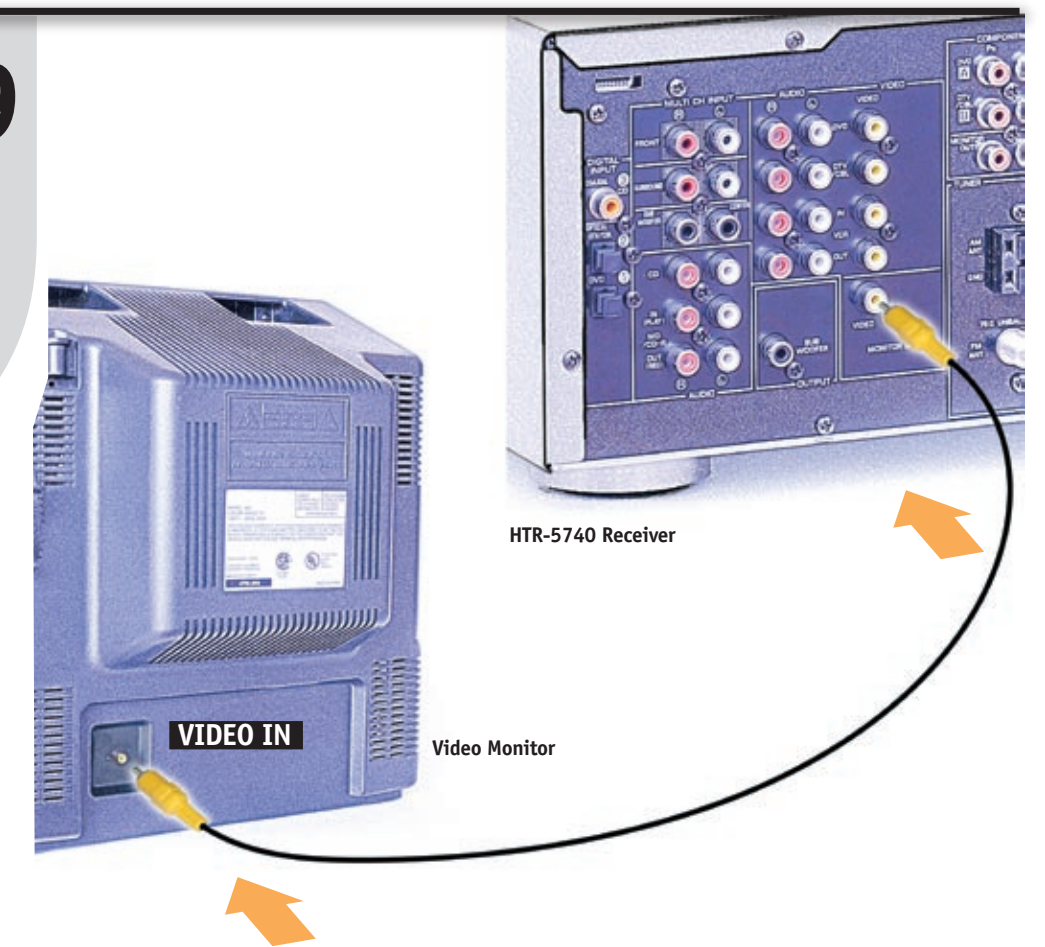

Video Monitor Connection

Connect a Video Monitor (optional) Connect an RCA video cable (not included) to receiver Monitor OUT from your video monitor as shown.

 
20

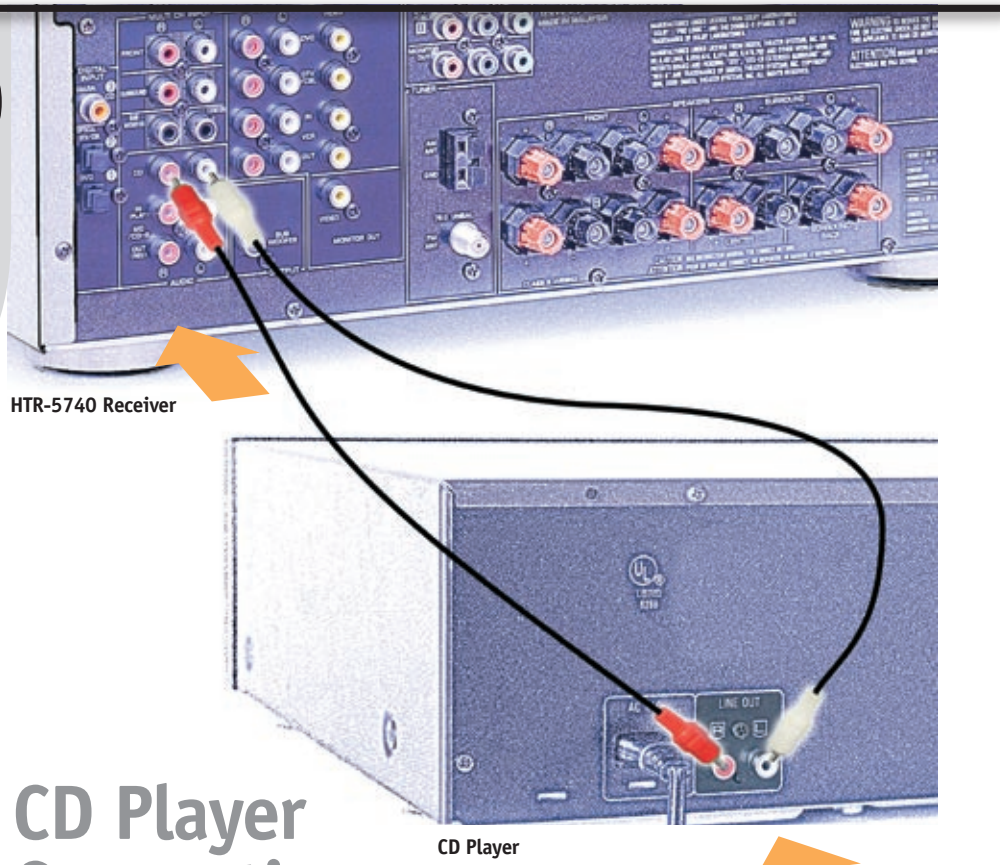

CD Player Connection

Connect CD Player (optional) Connect RCA audio cables (not included) to "CD" terminals on receiver as shown. If your CD Player has digital output terminal, connect digital cable (not included) to HTR-5740 Receiver Digital Input terminal. See page 17 of your HTR-5740 Owner's Manual for more information.

 21

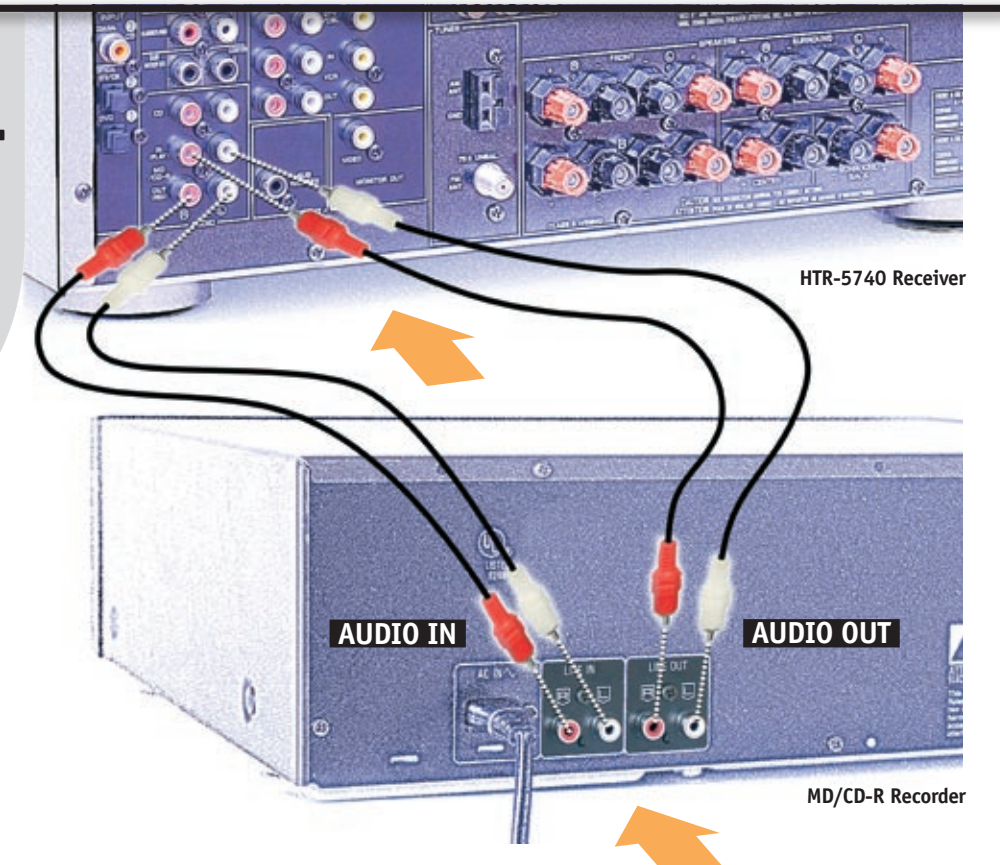

MD/CD-R Player Connection

Connect MD/CD-R Recorder (optional) Connect RCA audio cables (not included) to "MD/CD-R" terminals on receiver as shown.

22



Plug In Plug in the subwoofer, receiver, DVD player and other components. Power on the receiver first, then the subwoofer, and the others next. Adjust volume on the receiver. Please see each of your respective Owner's Manuals for recommended guidelines and settings.

Enjoy the Yamaha Home Theater Experience

Be sure to put batteries in your remotes (see Owner's Manuals for instructions). Refer to your Owner's Manuals for each component in your system for more information. Now, relax and enjoy the unparalleled sound of your Yamaha Home Theater system.



YAMAHA ELECTRONICS CORPORATION, USA
6660 Orangethorpe Avenue
Buena Park, CA 90620
<http://www.yamaha.com>
Phone: 1-800-292-2982

©2004 Yamaha Electronics Corporation
Printed in USA